

# DC driver and power unit combinations



## Driver type classification

Mini Type(BL-5000, CL-2000, CL-3000, CL-4000, SS-3000, SS-4000, α-4500, α-5000)

Standard Type(CL-6000, CL-6500, CL-7000, SS-6500, SS-7000, α-6500)

Power	Driver	Mini Type	Standard Type
			α-6500
Ⓜ	<b>CLT-50</b> Controller installed	1 only	1 only
Ⓜ	<b>CLT-65</b> <b>CLT-70</b> Controller installed	1 only	1 only
Ⓜ	<b>CLT-100</b> Controller installed	up to 2	up to 2
Ⓜ	<b>MC-70L</b> + <b>CB-105 (SUB)</b> Control box	CL/SS's Mini type to 20 machines BL/ 's Mini type to 10 machines	CL/SS's Standard type to 10 machines to 5 machines


In order to attach a branch wire to the main wire, using U-Element is recommended.

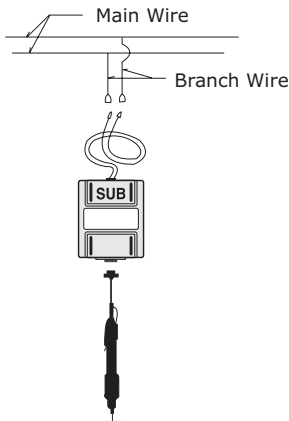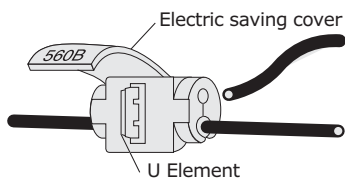


- ① Push open the crack underneath the element and push in the main wire.
- ② Push the cut mark of branch wire to the hole from the left until it reaches.
- ③ Push in U-Element(metal piece like a comb) with force until it becomes flat with plastic body using a plier.
- ④ Cover the electric saving cover and snap.

## Plug shape


### Type A-1 / 100V

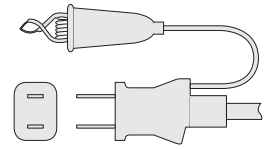


### Type A-2 / 120V

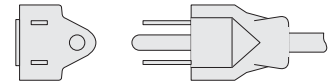

### Type C / 220V

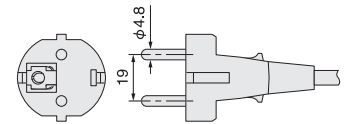

### Type BF / 220V~240V

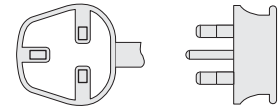

## CLT-20 (Control function installed)

The power is for CL-2000 only.  
For 1 machine

Voltage	100V	120V	220V~240V	
Primary power input voltage	AC100V±5% (50/60Hz)	AC120V±5% (50/60Hz)	AC220V~240V±5% (50/60Hz)	
Secondary output	HI/LOW 2 stage settings Max1A			
Power capacity	30W			
Dimensions(mm)	95(W)×160(D)×52(H)			
Weight	About 710g			
AC power cord length	1.8m(Earth attached inlet cord)			
Plug shape	A-1	A-2	C	BF
Order code	CLT-20	CLT-20-120	CLT-20-220G	CLT-20-230B